


Full lift safety valve with spring loading. (AIT)



EN

Model 596

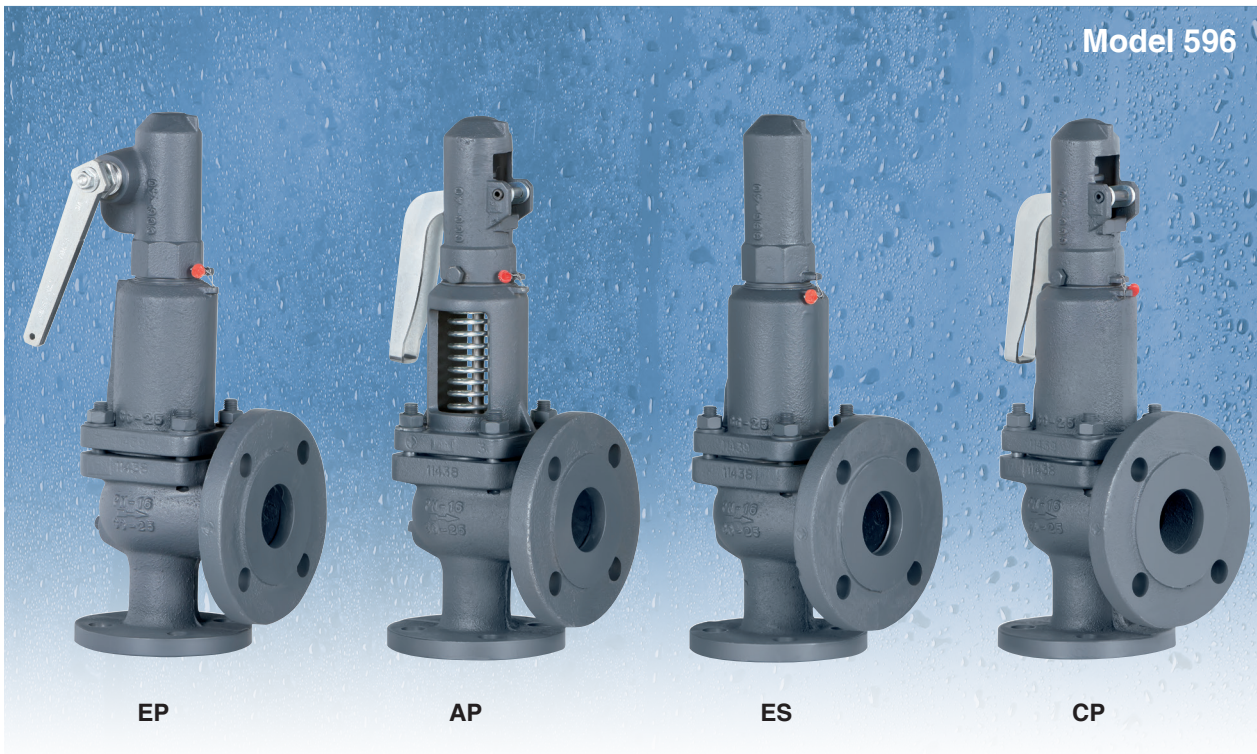

The valve works as an automatic pressure releasing regulator activated by the static pressure existing at the entrance to the valve and is characterized by its ability to open instantly and totally.

Design in accordance with "International Standard ISO 4126-1 Safety Valves".

In accordance with the requirements of the pressure equipment directive 2014/68/EU.

EC valve verification certified by: TÜV Rheinland Industrie Service GmbH, Notified Body for Pressure Equipment ID-No. 0035.

Type (Module B) EC examination report nº 33530455 certified by: TÜV Rheinland Ibérica ICT, S.A.

In compliance with the ATEX 2014/34/EU directive "Protective equipment and systems for use in potentially explosive atmospheres".

Other authorisations: ISCIR, ITI, NASTHOL,EAC,...etc.

Specifications

- 90° angular flow.
- Activated by direct for their resistance to corrosion. With the exception of washers and couplings, the valves are free of non-ferrous materials.
- Internal body designed to offer favourable flow profile.
- Sealing surfaces treated and balanced, making them extremely tightness, even exceeding EN 12266-1 requirements.
- Great discharge capacity. For liquids typically used with openings similar to proportional safety valves.
- Equipped with draining screws for removing condensation.
- Auto-centering plug.
- Threaded shaft with lever positioner facilitating immediate manual action.
- Elevator, independent of the seal, designed facilitate sudden opening when the steam expands and, with any fluid, guarantees absolute opening and closing precision.
- All the valves are supplied sealed at the set pressure requested, simulating operational conditions, and are vigorously tested.
- All components are numbered, registered and checked. If requested in advance, material, casting, test and efficiency certificates will be enclosed with the valve, and the instruction manual, in accordance with P.E.D. 2014/68/EU.

IMPORTANT

Depending on demand:

- 1.- Blocking screw which facilitates hydrostatic testing of the container which to beprotected.
- 2.- Rapid limiter to reduce the coefficient of discharge
- 3.- Fluorelastomer (Vitón) seals, Silicone's rubber, PTFE (Teflón)... etc.,achieving leakage levels less than


$$0,3 \times 10^{-3} \frac{\text{Pa cm}^3}{\text{seg.}}$$

The ranges of application allow certain flexibility although we recommend limiting them to:

RANGE OF APPLICATION FOR THE SEALS		SET PRESSURE IN bar						
		0,2	1,8	4,0	4,8	7,0	30,0	62,0
FLUID	Saturated	S	V	T	T	T	T	T
	Liquids and gases	S	S	V	T	T	T	T
SEALS			TEMPERATURE IN °C					
			ACCORDING TO MANUFACTURERS		RECOMMENDED BY VYC			
			MINIMUM	MAXIMUM	MINIMUM	MAXIMUM		
Silicone's rubber	S	-60	+200	-50	+115			
Fluorelastomer (Vitón)	V	-40	+250	-30	+150			
PTFE (Teflón)	T	-265	+260	-80	+230 (1)			


(1) For temperatures exceeding 230°C apply metallic seal only

- 4.- Fluorelastomer (Vitón) membrane and O-ring isolating the rotating or sliding parts from the working fluid.
- 5.- Electrical contact indicating open/closed.
- 6.- Balance bellows to:
 - Protect the spring from atmospheric influences.
 - Ensure outside of valve body is totally tightness.
 - Level out external or self-generated back pressure.
- 7.- Possibility of manufacture in other types of material, for special operating conditions (high temperatures, fluids, etc.).
- 8.- Totally free of oil and grease, to work with oxygen, avoiding possible fire risks (UV-Oxygen-VBG 62).
- 9.- Special springs for critical temperatures.

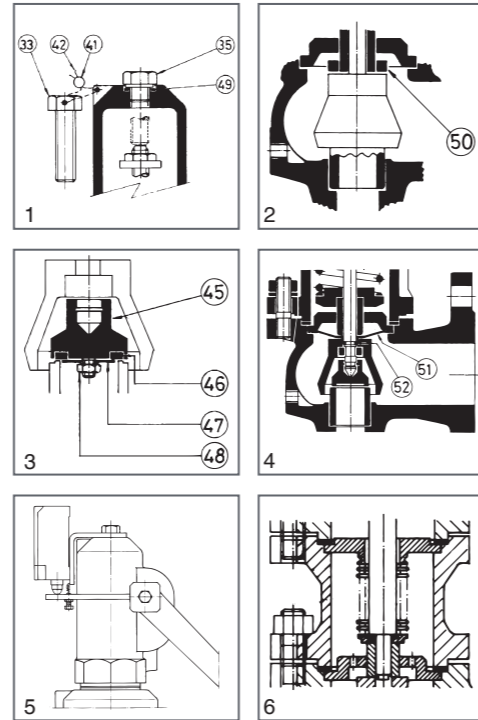

N.º PIECE	PIECE	MATERIAL	
		CAST STEEL	STAINLESS STEEL
1	Body	Cast steel (EN-1.0619+N)	Stainless steel (EN-1.4408)
2	Closed bell	Cast steel (EN-1.0619+N)	Stainless steel (EN-1.4408)
3	Open bell	Cast steel (EN-1.0619+N)	Stainless steel (EN-1.4408)
4, 5, 6	Hood	Nodular iron (EN-5.3106)	Stainless steel (EN-1.4408)
7	Elevator	Nodular iron (EN-5.3106) (1)	Stainless steel (EN-1.4408)(2)
8	Cam	Carbon steel (EN-1.0037)	Stainless steel (EN-1.4301)
9, 10	Lever	Carbon steel (EN-1.0037)	Carbon steel (EN-1.0037)
11	Seating	Carbon steel (EN-1.0460) (7)	Stainless steel (EN-1.4571) (8)
12	Plug	Stainless steel (EN-1.4028)	Stainless steel (EN-1.4542)
13	Lead	Stainless steel (EN-1.4028) (3)	Stainless steel (EN-1.4401) (4)
14	Spring press	Carbon steel (EN-1.1191)	Stainless steel (EN-1.4305)
15	Separator	Stainless steel (EN-1.4028)	Stainless steel (EN-1.4401)
16	Rod	Stainless steel (EN-1.4028)	Stainless steel (EN-1.4401)
17	Lever shaft	Carbon steel (EN-1.1191)	Stainless steel (EN-1.4305)
18	Gudgeon	Carbon steel (EN-1.1231)	Stainless steel (EN-1.4310)
19	Ring	Stainless steel (EN-1.4028)	Stainless steel (EN-1.4401)
20, 21	Safety ring	Stainless steel (EN-1.4310)	Stainless steel (EN-1.4310)
22	Spring	Vanadium chrome steel (EN-1.8159) (5)	Stainless steel (EN-1.4310) (6)
23	Gland	Carbon steel (EN-1.1191)	Stainless steel (EN-1.4305)
24	Hollow screw	Stainless steel (EN-1.4305)	Stainless steel (EN-1.4305)
25	Hollow screw nut	Stainless steel (EN-1.4305)	Stainless steel (EN-1.4305)
26	Buffer nut	Stainless steel (EN-1.4305)	Stainless steel (EN-1.4305)
27	Rod check nut	Carbon steel (EN-1.1141)	Stainless steel (EN-1.4401)
28, 29, 48	Nut	Carbon steel (EN-1.1141)	Stainless steel (EN-1.4401)
30, 31	Washer	Carbon steel (EN-1.1141)	Stainless steel (EN-1.4401)
32	Stud	Carbon steel (EN-1.1181)	Stainless steel (EN-1.4401)
33, 34, 35	Screw	Carbon steel (EN-1.1191)	Stainless steel (EN-1.4401)
36	Cap	Carbon steel (EN-1.1181)	Stainless steel (EN-1.4401)
38	Coupling	Graphite	PTFE (Teflon)
39	Coupling	PTFE (Teflon)	PTFE (Teflon)
40	Seal	Graphite	PTFE (Teflon)
41	Seal	Plastic	Plastic
42	Sealing wire	Sealing wire	Sealing wire
43	Characteristic plate	Stainless steel (EN-1.4301)	Stainless steel (EN-1.4301)
45	Plug	Stainless steel (EN-1.4401)	Stainless steel (EN-1.4401)
46	Sealing disk	PTFE (Teflon)	PTFE (Teflon)
		Silicone's rubber	Silicone's rubber
		Fluorelastomer (Vitón)	Fluorelastomer (Vitón)
47	Washer	Stainless steel (EN-1.4401)	Stainless steel (EN-1.4401)
49	Coupling	Copper	Copper
50	Limiter	Stainless steel (EN-1.4028)	Stainless steel (EN-1.4401)
51	Membrane	Fluorelastomer (Vitón)	Fluorelastomer (Vitón)
52	O-ring	Fluorelastomer (Vitón)	Fluorelastomer (Vitón)
DN1x DN2		25x32 to 400x500	
PN		62	160
OPERATING CONDITIONS	PRESSURE IN bar	62	62
	MAX. TEMP. IN °C	450°C	400°C
	MIN. TEMP. IN °C	-10	-60

(1) DN-25x32 in stainless steel (1.4408).
 (2) DN-32x50 a DN-65x100 in stainless steel (1.4401).
 (3) From DN-150x250 to DN-400x500 in stainless steel (DIN-1.4027).
 (4) From DN-150x250 to DN-400x500 in stainless steel (1.4408).
 (5) DN-25x32 from 30 to 40 and 38 to 50 bar in Spring steel (EN-10270-1-SH), DN-25x40 from 30 to 40 bar in Spring steel (EN 10270-1 SH).Max temp. EP, ES and CP 250°C / AP 400°C. Over
 400°C possibility of manufacturing the spring in another material if specified by the customer
 (6) DN-25x32 from 30 to 40 , 38 to 50 and 48 to 62 bar in Stainless Steel (EN.1.4310), DN-25x40 from 30 to 40, 38 to 50 and 48 to 62 bar in Stainless Steel (EN.1.4310)
 (7) From DN-125x200 to DN-400x500 in Carbon steel (1.0619)
 (8) From DN-125x200 to DN-400x500 in Stainless steel (1.4408)

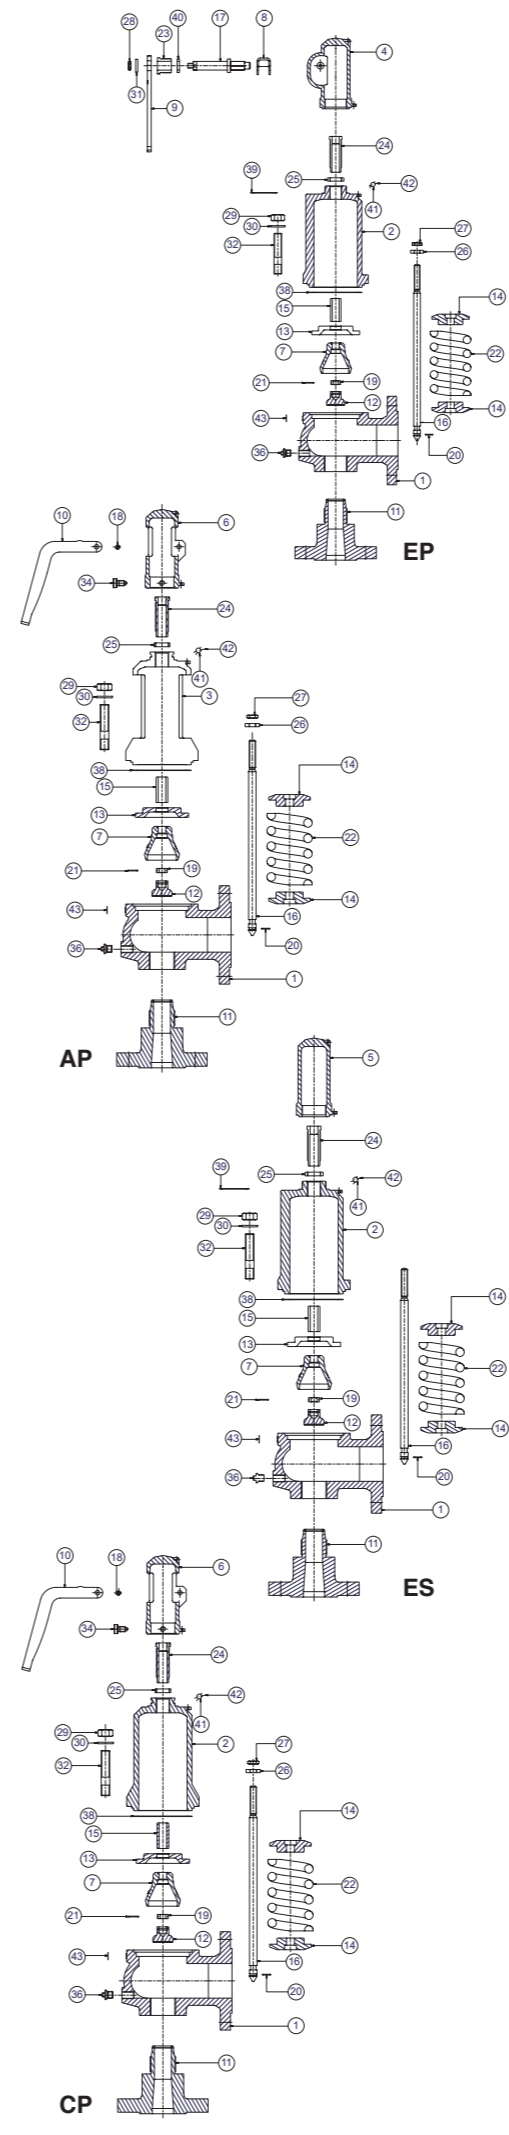

FULL LIFT SAFETY VALVE WITH SPRING LOADING (AIT) MODEL 596 - EP.

1. Disassembly and assembly.

- 1.1 Disassembly.
 To replace the spring (22), or clean any of the internal components of the valve, proceed in the following manner:
 A - Move the lever (9) in direction C as far as the constructive catcher.
 B - Unscrew the cap (4) and remove.
 C - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a releasing of the spring (22).
 D - Mark on the spindle (16) the position of the spindle lock-nut (27) and the adjusting nut (26). Loosen them and remove them.
 E - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).
 F - Lift the cover (2) and you will have access to all of the components.
- 1.2 Assembly.
 A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).
 B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21). Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.
 C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) in a correlative manner.
 D - Replace the assembly (38) and the cover (2).
 E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (2).
 F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).
 G - Turn the spindle lock-nut (27) and the adjusting nut (26) to the position marked (see 1.1.D) and make up against each other.
 H - Change the coupling (39) and lightly tighten the cap (4). Move the lever (9) towards position A as far as the constructive catcher. Definitely tighten the cap (4).
2. Adjusting the firing pressure.
 A - Proceed according to points 1.1.A, 1.1.B, 1.1.C.
 B - Proceed according to points 1.2.F, 1.2.H.

FULL LIFT SAFETY VALVE WITH SPRING LOADING (AIT) MODEL 596 - AP AND CP.

1. Disassembly and assembly.


- 1.1 Disassembly.
 To replace the spring (22) or clean any of the internal components of the valve, proceed in the following manner:
 A - Withdraw the clip (18), using a punching tool, until the lever (10) comes free.
 B - Loosen the screws (34) and take the cap (6) off.
 C - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a releasing of the spring (22).
 D - Mark on the spindle (16) the position of the spindle lock-nut (27) and the adjusting nut (26). Loosen them and remove them.
 E - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).
 F - Lift the cover (3) or (2) and you will have access to all of the components.
- 1.2 Assembly.
 A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).
 B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21). Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.
 C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) and press this against the previously described pieces.
 D - Replace the assembly (38) and the cover (3) or (2).
 E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (3) or (2).
 F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).
 G - Turn the spindle lock-nut (27) and the adjusting nut (26) to the position marked (see 1.1.D) and make up against each other.
 H - Introduce the cap (6) and tighten the screws (34).
 I - Place the lever (10) and fix it with the fastener (18).
2. Adjusting the firing pressure.
 A - Proceed according to points 1.1.A, 1.1.B, 1.1.C.
 B - Proceed according to points 1.2.F, 1.2.H, 1.2.I.

FULL LIFT SAFETY VALVE WITH SPRING LOADING (AIT) MODEL 596 - ES.

1. Disassembly and assembly.

- 1.1 Disassembly.
 To replace the spring (22), or clean any of the internal components of the valve, proceed in the following manner:
 A - Unscrew the cap (5) and remove.
 B - Holding the spindle (16) steady, loosen the hollow screw nut (25) and the hollow screw (24) until you note a releasing of the spring (22).
 C - Unscrew the nuts (29) and remove them, together with the studs (32) and their washers (30).
 F- Lift the cover (2) and you will have access to all of the components.
- 1.2 Assembly.
 A - Place the safety-ring (20) on the spindle (16) and press it against the gasket (12).
 B - In the spindle channel (16) connect the ring (19) and fix it to the security-ring (21). Introduce the elevator (7) into the upper part of the spindle (16) and press this against the previously described pieces.
 C - Enter the guide (13), the separator (15), the spring-press (14), the spring (22), the spring-press (14) through the upper part of the spindle (16) in a correlative manner.
 D - Replace the washers (38) and the cover (2).
 E - Place the washers (30) on the studs (32) and make up the nuts (29) diagonally, checking the correct alignment of the cover (2).
 F - Adjust the firing pressure with the hollow screw (24) and fix the adjustment position with the hollow screw nut (25).
 G - Change the coupling (39) and tighten the cap (5).
2. Adjusting the firing pressure.
 A - Proceed according to points 1.1.A, 1.1.B.
 B - Proceed according to points 1.2.F, 1.2.G. B - Proceder conforme al punto 1.2.F, 1.2.G.

DN1x DN2		25x32	25x40	32x50	40x65	50x80	65x100	80x125		100x150	125x200	150x250	200x300	250x350	300x400	400x500															
do		16	20	25	32	40	50	63		77	93	110	155	180	220	280															
Ao		201	314	491	804	1257	1964	3117		4657	6793	9503	18870	25450	38010	61575															
H		395	415	470	540	660	685	795		835	990	1185	1285	1400	1575	1900															
h1		150	150	175	175	225	225	225		225	300	385	400	420	522	590															
L1		95	100	110	130	145	155	190		210	215	225	265	300	335	375															
L2		110	110	115	140	150	160	180		200	220	245	290	340	370	415															
R		1/4"	1/4"	1/4"	1/4"	1/4"	3/8"	3/8"		3/8"	1/2"	1/2"	1/2"	3/4"	3/4"	3/4"															
Whitworth gas-tight cylindrical female thread ISO 228/1 (DIN-259)																															
INTAKE FLANGE	PN-160 EN 1092-1 (1) (2) (3) (4)	D1	140	140	155	170	195	220	230		250	295	300	360	425	485	620														
		K1	100	100	110	125	145	170	180		200	240	250	310	370	430	550														
		l1	18	18	22	22	26	26	26		26	30	26	26	30	30	36														
		b1	22	22	24	25	27	31	33		27	34	28	30	32	34	40														
		DRILLS N°	4	4	4	4	4	8	8		8	8	8	12	12	16	16														
ESCAPE FLANGE	PN-40 EN 1092-1 (1) (2)	D2	140	150	165	185	200	235	270		300	360	395	445	505	565	670														
		K2	100	110	125	145	160	190	220		250	310	350	400	460	515	620														
		l2	18	18	18	18	18	22	26		26	26	22	22	22	26	26														
		b2	18	18	20	22	24	24	26		28	30	26	26	26	26	28														
		DRILLS N°	4	4	4	4	8	8	8		8	12	12	12	16	16	20														
MODEL		EP	AP	ES	CP	EP	AP	ES	CP	EP	AP	ES	CP	EP	AP	ES	CP														
WEIGHT IN kgs.	CAST STEEL	12,00	11,40	11,60	11,80	14,00	13,40	13,60	13,80	19,00	18,40	18,60	18,80	28,00	27,40	27,60	27,80	40,00	39,40	39,60	39,80	50,00	49,40	49,60	49,80	80,00	79,40	79,60	79,80		
	STAINLESS STEEL																														
CODE	CAST STEEL 2002-596.	0344	03441	03442	03443	0104	01041	01042	01043	0144	01441	01442	01443	0124	01241	01242	01243	0204	02041	02042	02043	0224	02241	02242	02243	0304	03041	03042	03043		
	STAINLESS STEEL 2002-596.	0342	03421	03422	03423	0102	01021	01022	01023	0142	01421	01422	01423	0122	01221	01222	01223	0202	02021	02022	02023	0222	02221	02222	02223	0302	03021	03022	03023		
Escape flange (1) DN-125x200 PN-25 (2) From DN-150x250 to DN-400x500 PN-10																															
Intake flange (1) DN-32x50 and DN-80x125 PN-100 (2) From DN-100x150 to DN-125x200 PN-63 (3) DN-150x250 PN-40 (4) From DN-200x300 PN-25																															

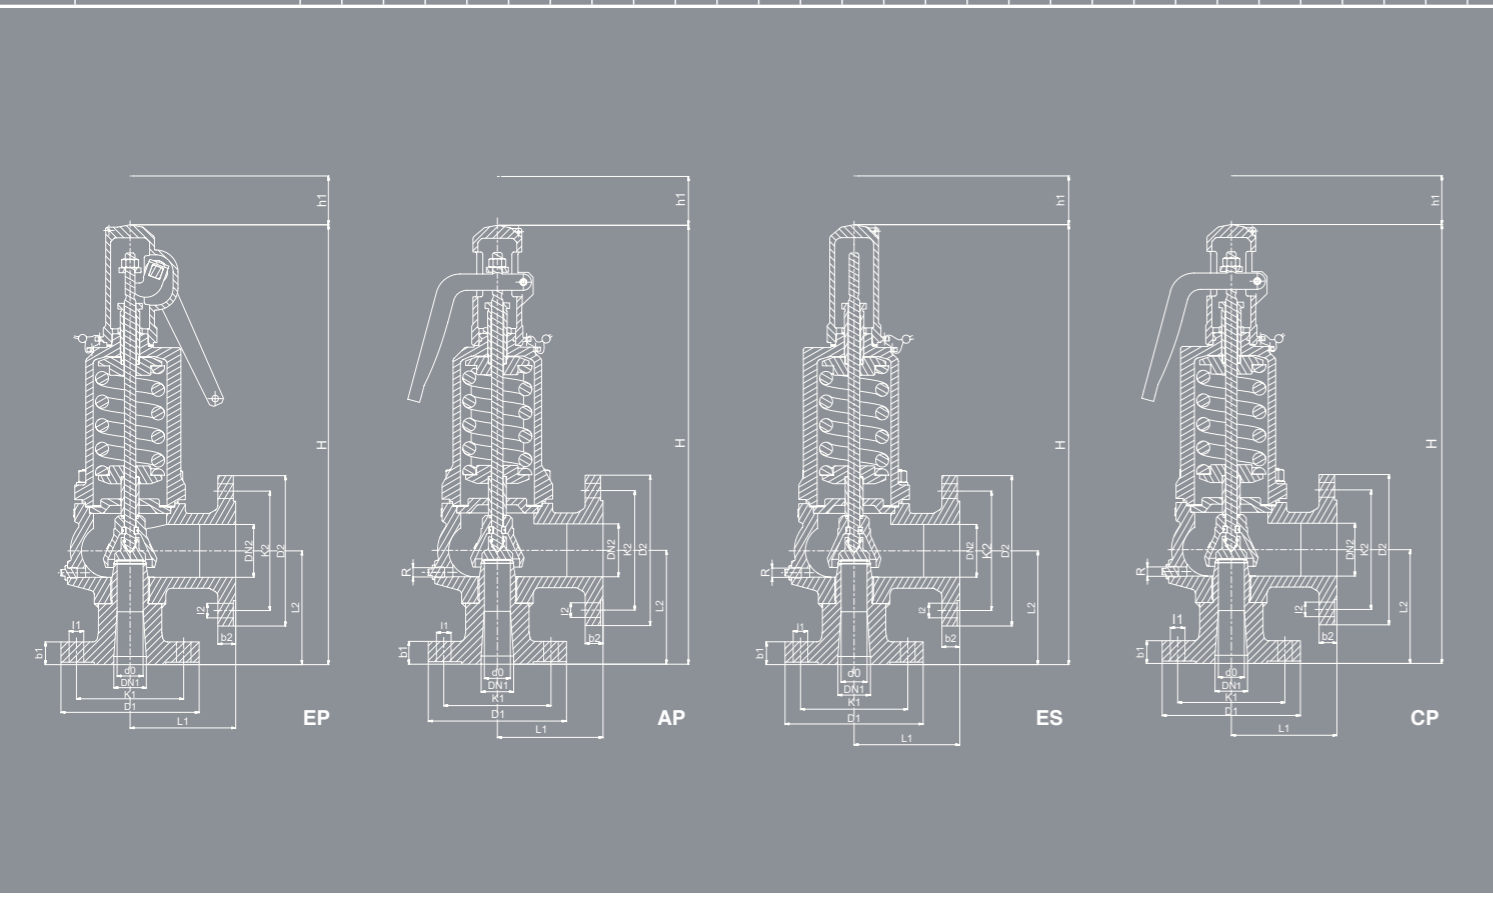

RECOMMENDED RANGES OF APPLICATION						
		MODEL	EP	AP ⁽¹⁾	ES	CP ⁽¹⁾
FLUID	SATURATED STEAM		*	*		*
	GASES		*		*	
	LIQUIDS		*		*	
PERMISSIBLE BACK PRESSURE IN % OF SET PRESSURE	INTERNAL OR GENERATED	SATURATED STEAM GASES	15			
		LIQUIDS	-			
	EXTERNAL VARIABLE (1)	SATURATED STEAM GASES	5			
		LIQUIDS	-			
	EXTERNAL CONSTANT (1) (2) (3)	SATURATED STEAM GASES	50			
		LIQUIDS	90			
%	OVERPRESSURE	SATURATED STEAM GASES	10			
		LIQUIDS	25			

OPEN AND CLOSED PRESSURES IN % OF SET PRESSURE			
FLUID	PRESSURE IN bar	OPENING PRESSURE	CLOSING PRESSURE
SATURATED STEAM	<3	+5%	- 0,3 bar
	≥3	+5%	- 10 %
LIQUIDS	<3	+10%	- 0,6 bar
	≥3	+10%	- 20 %

(1) If external backpressure exists, the AP and CP model cannot be used.
 (2) With external constant backpressure, the spring is adjusted deducting the backpressure from the set pressure.
 (3) If the set pressure < 3 bar we must consider the total atmospheric pressure (1 bar) as external constant backpressure being freely released.

If p_a > 0,25p, we must limit plug speed with the consequent reduction of the ad coefficient of discharge.
 With the new reduced coefficient we determine the d₀, in order to remove the necessary volume.


p_a = Backpressure permitted [bar] absolute
 p = Set pressure [bar] absolute.
 αd = Coefficient of discharge.

DISCHARGE CAPACITY												
DN1 x DN2	200x300			250x350			300x400			400x500		
do	155			180			220			280		
$A_0 = \frac{\pi \cdot d_0^2}{4}$	18870			25450			38010			61575		
p [bar]	I - Saturated steam in kg/h..											
	II - Air at 0°C and 1,013 bar in [Nm ³ /h].											
	III - Water at 20°C in l/h.											
	$V_L = \sqrt{\frac{Q_A}{Q_L}} \cdot V_A$						$V_A = V_L \cdot \sqrt{\frac{Q_L}{Q_A}}$					
	V_A = Water flow according to table. V_L = Liquid flow. V_A = Water density at a 20°C. $(V_A=998 \text{ kg/m}^3)$. V_L = Liquid density.											
SET PRESSURE IN bar	I	II	III	I	II	III	I	II	III	I	II	III
0,2				11840	13398	202775	16966	19199	302848	27484	31102	490604
0,5				14703	16748	327368	21069	23999	488930	34131	38878	792052
1,0				19414	23261	466109	27820	33332	696141	45068	53997	1127727
1,5				24087	29076	572141	34516	41665	854502	55915	67496	1384266
2,0				28730	34891	661387	41169	49998	987792	66692	80995	1600192
2,5				33349	40706	739946	47788	58331	1105121	77414	94494	1790262
3,0				37948	46521	810930	54378	66664	1211137	88091	107993	1962004
3,5				42531	52337	876182	60945	74997	1308592	98729	121492	2119878
4,0				47099	58152	936900	67492	83330	1399276	109334	134992	2266783
4,5				51656	63967	993916	74021	91663	1484430	119912	148491	2404731
5,0				56202	69782	1047834	80536	99996	1564958	130466	161990	2535183
5,5				62894	75597	1099111	90126	108329	1641540	146001	175489	2659243
6,0				69508	81413	1148099	99602	116662	1714705	161353	188988	2777768
6,5				76063	87228	1195081	108997	124995	1784874			
7,0				82576	93043	1240285	118329	133328	1852386			
7,5	66031	73299	951951	89056	98858	1283898	127615	141661	1917523			
8,0	73572	77610	983225	99227	104673	1326077	142190	149994	1980519			
9,0	83050	86234	1042964									
10,0	92510	94857	1099462									
11,0												
12,0												
13,0												
14,0												
15,0												
16,0												
17,0												
18,0												
20,0												
22,0												
24,0												
25,0												
26,0												
28,0												
30,0												
32,0												
34,0												
36,0												
38,0												
40,0												
42,0												
44,0												
46,0												
48,0												
50,0												
52,0												
54,0												
56,0												
58,0												
60,0												
62,0												

SET PRESSURES AND REGULATING RANGES														
SET PRESSURES IN bar	DN ₁ x DN ₂		25x32	25x40	32x50	40x65	50x80	65x100	80x125	100x150	125x200	150x250	200x300	
	MAXIMUM (LIQUIDS AND GASES)	PN-160	62	62	62	62	62	62	50	40	25	20	10	
MAXIMUM (SATURATED STEAM)	PN-160	62	62	62	62	62	62	62	50	40	25	20	10	
MINIMUM	STEAM AND GASES	30	30	30	23	23	23	18	18	12	9,5	7,5		
	LIQUIDS	38	38	38	30	30	30	23	18	12	9,5	7,5		
SPRING REGULATING RANGE IN bar	7,50 to 10,00	CODE											56569	
	9,50 to 12,50	CODE										56566		
	12,00 to 16,00	CODE								56563	56567			
	15,00 to 20,00	CODE								56564	56568			
	18,00 to 25,00	CODE							56576	56560	56565			
	23,00 to 32,00	CODE				56573	56574	56575	56557	56561				
	30,00 to 40,00	CODE	56570 56619 56542	56571 56626 56544	56572	56548	56551	56554	56558	56562				
	38,00 to 50,00	CODE	56620 56543	56622 56545	56546	56549	56552	56555	56559					
	48,00 to 62,00	CODE	56621	56623	56547	56550	56553	56556						

- Spring steel EN-10270-1-SH
- Vanadium-chrome steel EN-1.8159
- Stainless steel EN-1.4310

		DN ₁ x DN ₂	250x350	300x400	400x500
SET PRESSURES IN bar	MAXIMUM (LIQUIDS AND GASES)	PN-160	8	7	6
	MAXIMUM (SATURATED STEAM)	PN-160	8	7	6
	MINIMUM	STEAM AND GASES	0,5	0,5	0,5
LIQUIDS		0,2	0,2	0,2	
SPRING REGULATING RANGE IN bar	0,20 to 0,68	CODE	56627	56579	56588
	0,66 to 1,00	CODE	56628	56580	56589
	0,95 to 1,40	CODE	56629	56581	56590
	1,30 to 1,90	CODE	56630	56582	56591
	1,80 to 2,60	CODE	56631	56583	56592
	2,50 to 3,60	CODE	56632	56584	56593
	3,50 to 5,00	CODE	56633	56585	56594
	4,80 to 6,30	CODE	56577	56586	56595
6,00 to 8,00	CODE	56578	56587		



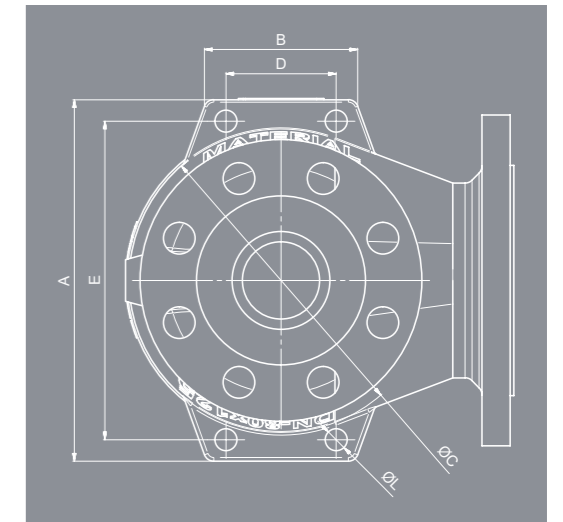


SUPPORT BRACKETS DIMENSIONS								
DN1xDN2	A	B	C	D	E	L	THICKNESS	DRILLS N°
40x65	186	96	147	70	156	14	13,5	4xM12
50x80	210	98	166	70	180	14	14	4xM12
65x100	250	100	200	70	220	14	14	4xM12
80x125	295	125	248	90	260	18	16	4xM16
100x150	344	129	292	90	309	18	17	4xM16
125x200	374	129	309	90	339	18	17	4xM16
150x250	440	184	370	120	400	18	20	4xM16
200x300	530	188	459	130	494	23	20	4xM20
250x350	664	195	581	160	624	23	20	4xM20
300x400	710	215	616	180	655	23	23	4xM20
400x500	880	238	760	200	820	23	23	4xM20


Support brackets will only be drilled if specified by the customer

COEFFICIENT OF DISCHARGE


DN1x DN2	25x32	25x40	32x50	40x65	50x80	65x100	80x125	100x150	125x200	150x250	200x300	250x350	300x400	400x500
do	16	20	25	32	40	50	63	77	93	110	155	180	220	280
h	7,00	9,00	12,00	12,00	18,00	18,00	20,00	29,00	34,40	36,80	56,15	64,80	79,20	100,80
h1	2,60	3,20	4,00	5,20	6,50	8,00	10,00	12,50	16,74	19,80	27,90	32,4	39,6	50,4
h/do	0,44	0,45	0,48	0,38	0,45	0,36	0,32	0,38	0,37	0,33	0,36	0,36	0,36	0,36
h1/do (1)	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,18	0,18	0,18	0,18	0,18	0,18
COEFFICIENT OF DISCHARGE kd	SATURATED STEAM GASES	0,78										0,74		0,71
	LIQUIDS	0,60							0,52				—	
	LIQUIDS WITH RAPID LIMITER (1)	0,36										—		

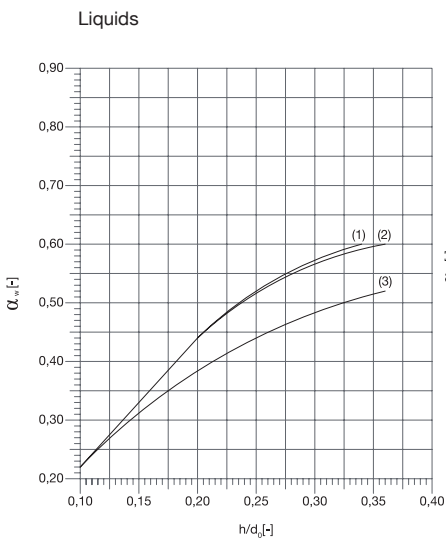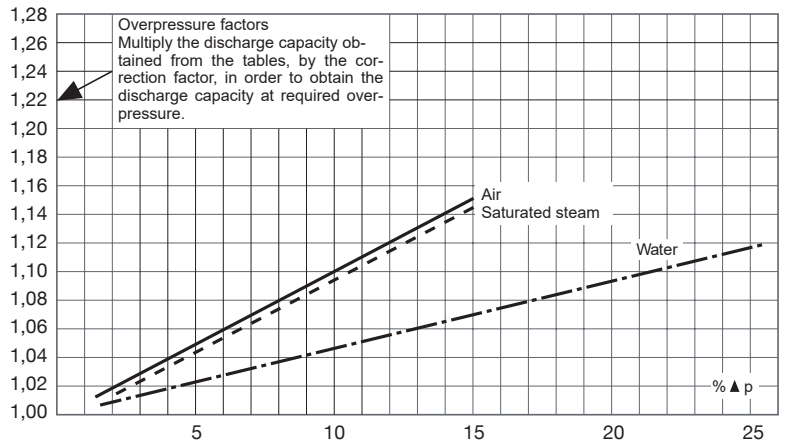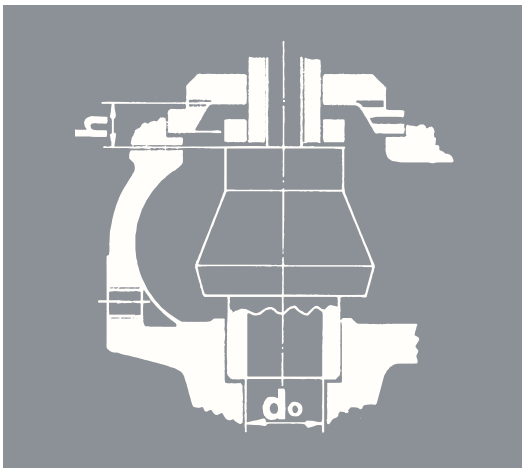

- (1) d₀ 16-63
- (2) d₀ 77
- (3) d₀ 93-155

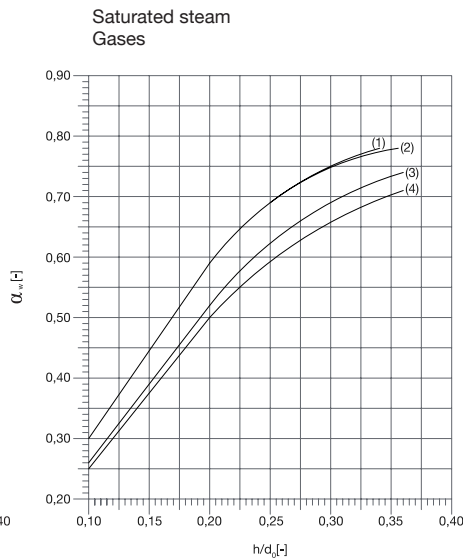

- (1) d₀ 16-77
- (2) d₀ 93-110
- (3) d₀ 155-180
- (4) d₀ 220-280

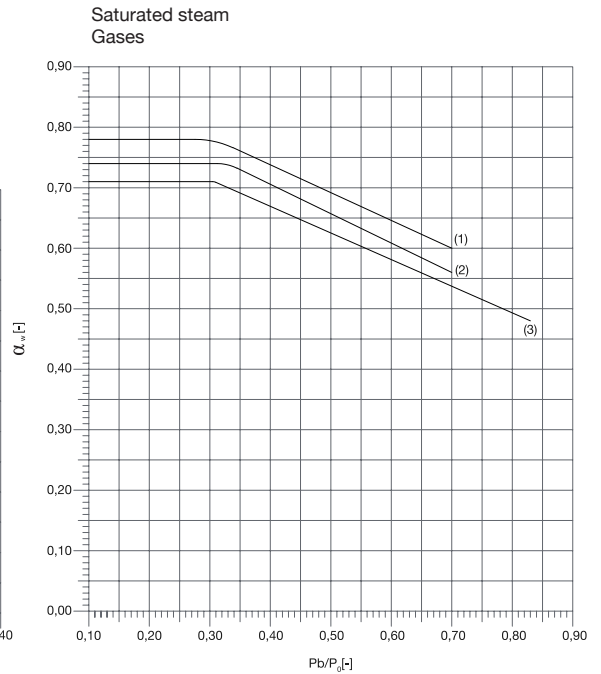

- (1) d₀ 16-110
- (2) d₀ 155-180
- (3) d₀ 220-280